

Pipe Adaptors Assembly Instructions

Gas Direct Vent System



CONVERSION FROM AVD TO DT & DT TO AVD - PIPE ADAPTORS

The following Adaptors are available to convert an AMERIVENT Direct Vent system (ADV) to a Selkirk Model Direct Temp System (DT) or vice-versa. These Adaptors are available for 4" and 5" diameters, unpainted and painted.

Do not install AmeriVent Direct Vent or Selkirk Direct Temp without first carefully reading the **main instructions** and the appliance manufacturer's instructions. If you still have any doubt about your ability to complete the installation in a safe manner after reading these instructions, arrange for a professional installation.

The appliance must be listed for use with AmeriVent Direct Vent or Selkirk Direct Temp. Refer to the appliance manufacturer's label and installation instructions to make sure that the AmeriVent Direct Vent system or Selkirk Direct Vent system is approved for use with your specific gas direct vent appliance.

Adaptors:

Converting from AMERIVENT AVD to Selkirk DT (Figure 1a & b)
 1604280 - 4AVD to 4DT Pipe Adaptor
 1604280B - 4AVD to 4DT Pipe Adaptor Black
 1605280 - 5AVD to 5DT Pipe Adaptor
 1605280B - 5AVD to 5DT Pipe Adaptor Black

Adaptors:

Converting from Selkirk DT to AMERIVENT AVD (Figure 2a & b)
 1604281 - 4DT to 4AVD Pipe Adaptor
 1604281B - 4DT to 4AVD Pipe Adaptor Black
 1605281 - 5DT to 5AVD Pipe Adaptor
 1605281B - 5ADT to 5AVD Pipe Adaptor Black

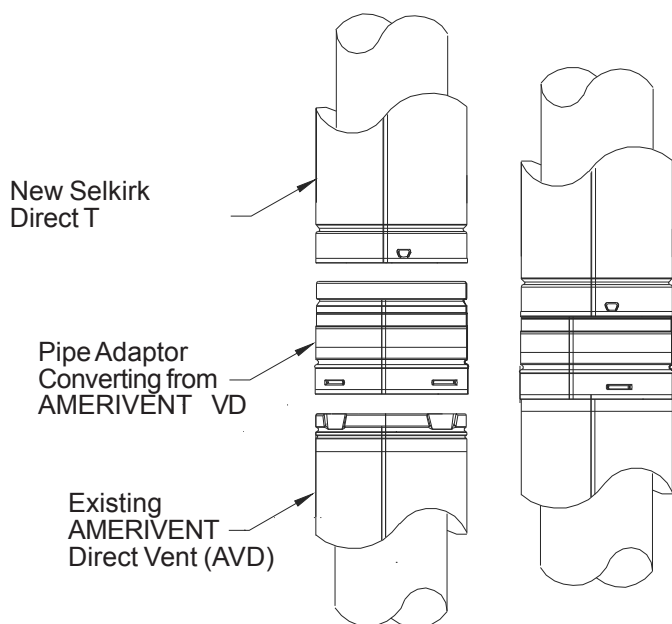


Fig. 1a - Align pipe ends from the Adaptor to the existing AVD pipe. Align pipe ends of the Adapter to the existing AVD pipe. Make sure the pipe seams are in line. Press together and engage. Rotate Adapter clockwise to lock in place.

Fig. 1b - Assemble the new Selkirk DT pipe to the Adapter until fully seated. Push in the Lock Tab such that it becomes seated within the inward groove.

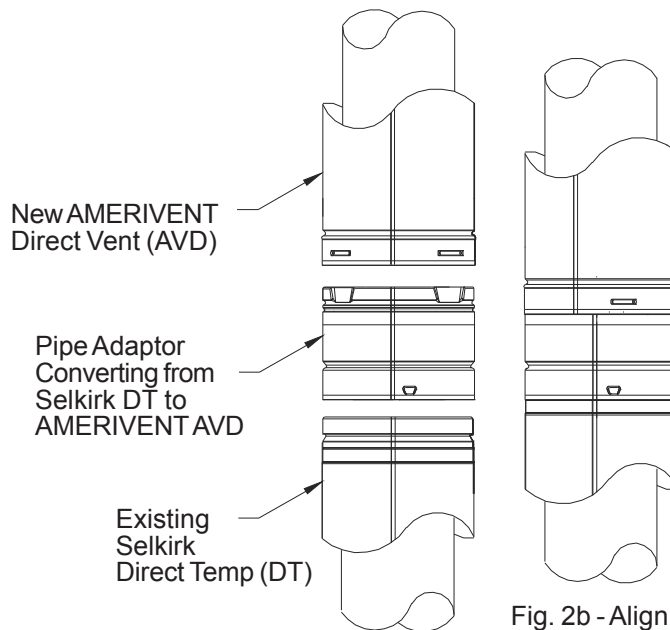


Fig. 2a - Assemble the adapter until fully seated to the existing DT pipe. Push in the Lock Tab such that it becomes seated within the inward groove.

Fig. 2b - Align pipe ends of the new AMERIVENT AVD to the Adaptor. Make sure the pipe seams are in line. Press together and engage. Rotate clockwise to lock in place.

5030 Corporate Exchange Blvd. SE
 Grand Rapids, MI
 49512

800-423-4270 toll-free
 616-656-8400 phone
 800-626-3625 toll-free fax
 616-656-6388 fax